


PROPANE - Handyman Blow Torch Kit with Full Flame Burner

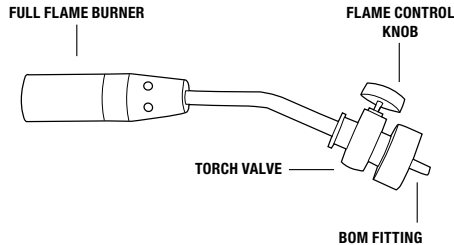

TO ASSEMBLE

1. Ensure the flame control knob is turned off (-) fully clockwise.
2. Keep the cylinder in an upright position and place the torch valve on top of the BOM fitting.
3. Gently screw (clockwise) the valve body into the cylinder.

CAUTION - DO NOT OVER TIGHTEN.

TO IGNITE

1. To avoid injury or damage, always point the burner away from your body and any flammable or combustible materials.

Note: It is very difficult to light the torch with the valve fully open. This results in the gas blowing out the ignition source.

2. Turn the flame control knob (+) anti-clockwise.
3. Use an external ignition source to ignite the torch burner. If using a match, hold the match at a 120° angle to the burner. If using a sparkler open the valve slowly before sparking. Hold the sparkler at 45° angle to the burner.

This torch is only designed to be used in an upright position. Never use this torch upside down as this may cause the flame to flare or extinguish.

ADJUSTING THE FLAME LEVEL.

Turn the flame control knob anti-clockwise (+) to increase the flame.
Turn the flame control knob clockwise (-) to decrease the flame.

TO EXTINGUISH

Turn the flame control knob fully clockwise to the closed position (-).

Allow the torch to cool.

TO DISASSEMBLE

1. Ensure the burner has cooled properly.
2. Gently screw (anti-clockwise) the torch from the cylinder.
3. Replace the gas cylinder cap to keep the valve clean.

STORAGE

- Ensure flame is completely out after use.
- Always detach torch from cylinder when not in use.
- Do not disassemble, puncture or incinerate cylinder after use.
- Make sure that the cylinder is disconnected and is stored in a well ventilated area, out of the reach of children, free from direct sunlight, heat and ignition sources. If being stored indoors, ensure that the location complies with the standard AS/NZS 1596.
- Do not store chemicals or flammable materials, or spray aerosols near this appliance.

MAINTENANCE/SERVICING

If symptoms such as flaring burner, issues with lighting, leaks from seals or problems with gas control are identified, do not attempt to repair, return to your authorised stockist for service and maintenance.

This appliance must only be serviced by an authorised person.