

# Trade**flame**

## REGULATOR CONVERSION KIT SETUP

### PUSH FITTING

To remove push fitting from regulator, push the blue cap toward the regulator and pull push fitting away from the regulator

### REGULATOR VALVE

Used to regulate flow of gas for welding. Varies according to welding requirements

### HOSE CLIP

### CONNECTION

Ensure the regulator is off by turning the regulator valve fully anticlockwise before attaching to the cylinder. Screw regulator onto the cylinder in clockwise direction (DO NOT OVERTIGHTEN)

### HOSE

Connects to gas inlet of welding machine

### HOSE CLIP

### BRACKETS

For mounting to welding machine

### CYLINDER

Not included. Shielding gas sold separately

