


PRODUCT MANUAL MINI BLOW TORCH & SOLDERING IRON

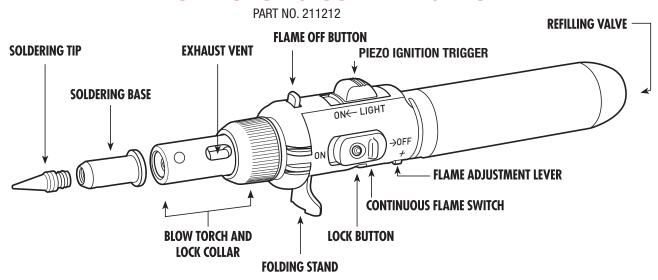

FEATURES

- Piezo ignition
- Hot blower and blow torch functions
- Gas on/off & flame adjustment lever
- Continuous flame switch with lock button
- Cordless, lightweight, compact and versatile
- Includes protective cover
- Integrated folding stand
- Use in conjunction with Butane Cartridge 70 g (10000602) & 200 g (10000603)

SPECIFICATIONS

Consumption: 11.6 g/hr
Fuel storage size: 20 g
Burning time: 100 min
Flame length: 50 mm
Effect: 0.125 kW

FILLING/ REFILLING GAS

- Ensure continuous flame switch is in off position and soldering torch has cooled down
- 2. Hold soldering torch in an upside down position
- 3. Insert the butane cartridge refill nozzle into the refilling valve and push down
- 4. Stop refilling when gas starts to overflow

TO IGNITE

- 1. Face the exhaust vent upward
- **2.** Push continuous flame switch to on position.
- 3. Push trigger to on
- 4. Adjust flame level with the flame adjustment lever
 - A) + to increase
 - B) to decrease

TO EXTINGUISH

- 1. Press flame off button
- Press in lock button on continuous flame switch and push to off position

HOT BLOWER

1. Unscrew soldering tip (counter clockwise) from the soldering base

BLOW TORCH

- Unscrew (counter clockwise) the lock collar and remove the blow torch and lock collar assembly
- Remove the soldering base, then install the blow torch and refit the lock collar
- 3. Tighten securely

WARNING

- To avoid injury or damage only ignite the torch when clear of face, hand, clothing or combustible material
- The burner becomes extremely hot during and after operation. Care must be taken to avoid accidental burns
- Ensure the flame is completely out after use
- Protect from direct sunlight. Do not expose to temperature above 50°C/120°F

TORCH IS SUPPLIED WITHOUT GAS. TORCH REQUIRES FILLING BEFORE USE. USE WITH TRADEFLAME BUTANE GAS REFILL 70 G (10000602) & 200 G (10000603)

