


PROPANE - Weed Burner with Piezo Auto Ignition Product Number: 211767

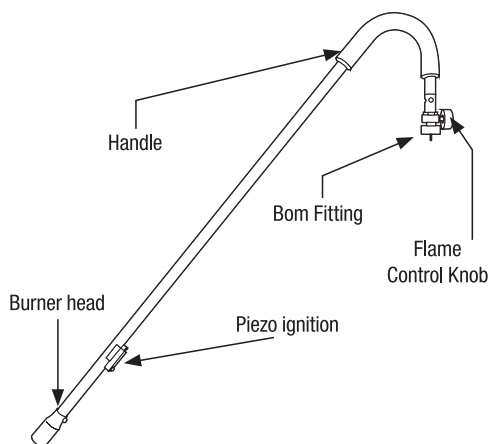

IMPORTANT: READ THESE INSTRUCTIONS FOR USE CAREFULLY. FAMILIARISE YOURSELF WITH THE APPLIANCE BEFORE CONNECTING IT TO ITS GAS CONTAINER. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

This appliance shall only be used with disposable propane $\geq 95\%$ only cartridges certified to EN12205, UN1978.

IT MAY BE HAZARDOUS TO ATTEMPT TO FIT OTHER TYPES OF GAS CONTAINERS.

ONLY USE IN WELL-VENTILATED AREAS.

CARBON MONOXIDE HAZARD - USING THIS APPLIANCE IN AN ENCLOSED SPACE MAY CAUSE DEATH. DO NOT USE IN CARAVANS, TENTS, MARINE CRAFT, CARS, MOBILE HOMES OR SIMILAR LOCATIONS.

CAUTION: accessible parts may be very hot. Keep young children away.

WARNING! USE OUTDOORS ONLY.

SAFETY INFORMATION

- Inspect the appliance regularly for signs of wear, leaks or incorrect operation.
- Do not modify this appliance.
- Ensure all packaging is removed prior to use.
- Check that seals between the appliance and the gas container are in place and in good condition before connecting the gas cartridge.
- Do not use this appliance if it has damaged or worn seals.
- Do not use the appliance if it is leaking, damaged or does not operate properly.
- Gas containers shall be changed in a well-ventilated location, preferably outside, away from people and any source of ignition, such as naked flames, pilot flame, electric heaters/equipment.
- To avoid injury or damage, only ignite the torch when clear of face, hands, clothing or combustible materials.
- Always inspect your environment before igniting to ensure the area is clear of any potential ignition sources or hazards.
- The burner becomes extremely hot during and after operation. Care must be taken to avoid accidental burns.

- This appliance must be operated away from any flammable material or surfaces and materials.
- Never leave the torch unattended once lit. Extinguish the torch first ensuring it is completely out and safe before leaving unattended.
- Protect from direct sunlight. Do not expose to temperature above 50C/120F.
- Do not breathe gas, fumes, vapour or spray. If inhaled, move the person to a fresh air environment.
- For maximum protection, always wear safety goggles, gloves or other appropriate equipment.
- Avoid contact with eyes or skin. In case of contact with eyes, rinse immediately with plenty of water and seek medical advice.

MAINTENANCE/SERVICING

- If symptoms such as flaring burner, issues with lighting, leaks from seals or problems with gas control are identified, do not attempt to repair, return to your authorised stockist for service and maintenance.
- This appliance must only be serviced by an authorised person.

HOW TO USE THE TRADEFLAME WEED BURNER

Holding the burner about 5 cm above the weeds, slowly heat the weed until it goes darker green. The weed should be heated only and not burnt. The heating causes the cell walls in the plant to burst and the plant wilts naturally. The effect can be checked by pressing a leaf of the weed between the fingertips - a dark green fingerprint will appear on the leaf when heated correctly.

After 3-5 days the weeds should have dried out completely - with just the need to clean up and compost. The weed burner is best used in spring and is most effective against smaller weeds, so it is best to get to them while they are still small and just starting to grow. Small weeds die completely after one treatment. Grass, dandelion and other perennial weeds need repeated treatment throughout the growing season.

Extreme caution must be used when working around dry grass and leaves. Fires can start very easily and spread very quickly. This product is not intended to light the weeds on fire, it is intended to only singe the weeds so they wilt and die. Keep a hose or water handy when using this product.

TO ASSEMBLE

1. Ensure the flame control knob is turned off - fully clockwise.
2. Keep the cylinder in an upright position and place the torch valve on top of the cylinder BOM fitting (CGA600).
3. Gently screw (clockwise) the valve onto the cylinder.
CAUTION - DO NOT OVER TIGHTEN

TO IGNITE

1. To avoid injury or damage always point the burner away from your body and any flammable or combustible materials.
2. Turn the flame control knob on anti-clockwise.
3. Press the piezo auto ignition button to ignite the burner.

ADJUSTING THE FLAME LEVEL.

1. Turn the flame control knob anti-clockwise to increase the flame (+) .
2. Turn the flame control knob clockwise to decrease the flame (-).

TO EXTINGUISH

1. Turn the flame control off (-) fully clockwise.

TO DISASSEMBLE

1. Follow the EXTINGUISH instructions.
2. Ensure burner has cooled properly.
3. Gently screw (anti-clockwise) the weed burner from the gas cylinder.
4. Replace the gas cylinder cap to keep the valve clean.

STORAGE

- Always detach torch from cylinder when not in use.
- Make sure that the cylinder is disconnected and is stored in a well ventilated area, out of the reach of children, free from direct sunlight, heat and ignition sources. If being stored indoors, ensure that the location complies with the standard AS/ NZS 1596.
- Do not store chemicals or flammable materials, or spray aerosols near this appliance.

SPECIFICATIONS:

- **Gas:** Suitable for use with Propane (sold separately)
- **Gas cartridge fitting type:** CGA600 (BOM fitting) (cartridge not included)
- **Gas consumption:** 250 g/h
- **Running time:** 1.5 hours with full gas cartridge
- **Length:** 870 mm
- **Weight:** 760 g
- Variable flame control
- Piezo Ignition