 



PRODUCT MANUAL WOOD BURNING STATION

240V 20 W Variable Temperature


PART NO: 218212



 
1. Ball point tip



 3. Round shading tip



 2. Universal shading tip



4. Drawing point tip



FEATURES

- Large range of temperature selections to suit a range of applications (200°C - 650°C)
- Quick heat up time <10 sec
- Heat to max <30 sec
- Cool touch handle with soft grip
- Easy to use
- In-built stand
- Interchangeable tips
- Ideal for the beginner right through to the advanced user
- Designed specifically for use on wood and leather

SPECIFICATIONS

- **Power source:** 240V
- **Output:** 20 W
- **Cable length:** 1.8 m length
- **Cable length station to wood burning pen:** 1.0 m

WARNING

The wood burning pen and tips become extremely hot during and after operation - care must be taken to avoid accidental burns

CONTENTS

- Wood burner power supply
- Wood burning pen
- Detachable iron stand
- Four interchangeable tips:
 1. Ball point tip
 2. Universal shading tip
 3. Round shading tip
 4. Drawing point tip
- Phillips head screwdriver

IMPORTANT

Read instructions within for use carefully so as to familiarise yourself with the appliance before using it. Keep these instructions for future reference

SAFETY PRECAUTIONS

1. CAUTION –The tool reaches high temperature! May cause burn.
2. WARNING - This tool must be placed on its stand when not in use.
3. Do not touch hot tip or hot metal parts when in use.
4. We strongly urge users to always rest the hot iron on the stand to prevent risk of fire. If the stand is not used, the heated tip may burn any objects that come in contact which will result in a fire hazard.
5. Keep out of reach of children.
6. Misuse may cause burns, electric shock, and injuries.
7. Do not immerse tool in water or other liquid! Danger of electric shock!
8. Always use the tool on a heatproof and uncluttered table.
9. After finished using the tool, let the tool cool naturally on safety stand in a safe place, out of reach of children.

INSTRUCTIONS FOR USE

1. The wire safety stand is located at the bottom of the main unit.
2. Please remove the wire stand and slide into the right or left side of the main unit depending on the user's preference.
3. Select any wire tip style and insert wire tip into the pen terminals.
4. Use Philips screwdriver to tighten the screws on the terminals
5. Rest the pen on the safety stand.
6. Plug in the main unit and turn the temperature control dial so the heat indicator light turns on.
7. Let the pen preheat for 15-30 seconds to reach working temperature.
8. It is recommended to always start at a lower temperature first and build up heat slowly as needed.
9. Practice on a sample piece of wood.
10. When changing the tip, please turn the temperature dial to off position.
11. Unscrew the terminal screws using Philips screwdriver.
12. Use pliers to remove the wire tip to avoid burn, and insert another wire tip.
13. Use Philips screwdriver to tighten the screws on the terminals
14. Always turn off and unplug the main unit after use.

DISPOSAL



This symbol indicates that the appliance shall not be disposed of with household waste, but in disposal containers provided for that purpose. Check with your local council for recycling facilities for electrical and electronic equipment in your area.