


## HANDY MICRO TORCH PRODUCT MANUAL

PART NO. 211234

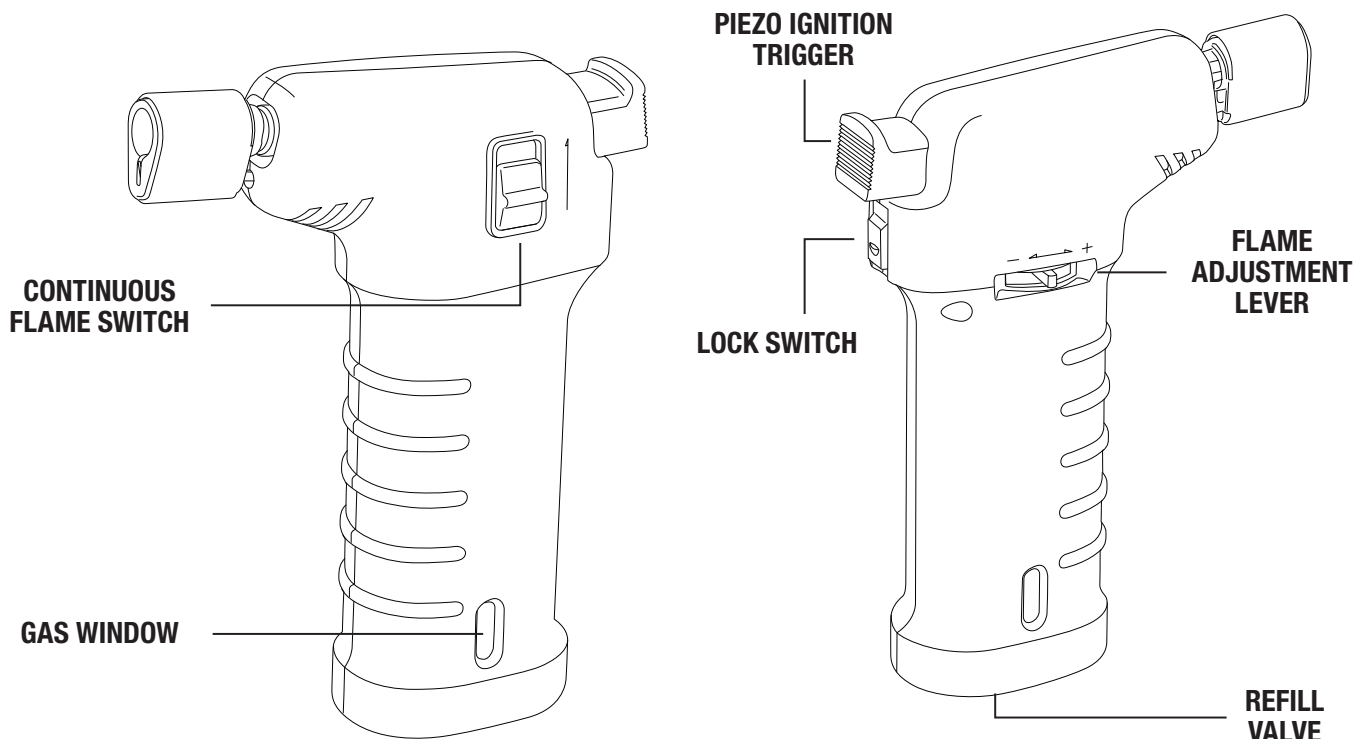

### FEATURES:

**Gas:** Suitable for use with Butane

**Effortless ignition:** Ditch the matches! A simple trigger click sparks the flame instantly

**Compact powerhouse:** Lightweight and portable, this torch goes wherever your projects take you

**Trigger lock:** For a continuous flame

### TO IGNITE:

1. Push the lock switch down
2. Depress trigger
3. Push continuous flame switch to upper position
4. Adjust flame level with the flame adjustment lever  
+ to increase - to decrease

### TO EXTINGUISH:

1. Release the ignition button.
2. Slide the continuous flame switch to the lower position  
Torch will shut off immediately.

### FILLING/REFILLING GAS:

1. Ensure continuous flame switch is in off position and torch has cooled down
2. Hold torch in an upside-down position
3. Insert the butane cartridge refill nozzle into the refilling valve and push down
4. Stop refilling when gas starts to overflow
5. Refill in a well-ventilated area and away from fire or ignition sources.
6. Allow 2 – 3 seconds to refill torch.
7. Before igniting, allow 90 seconds for gas to stabilise.

**TORCH IS SUPPLIED WITHOUT GAS. TORCH REQUIRES FILLING BEFORE USE.**

**USE WITH TRADEFLAME BUTANE GAS REFILL 70G (10000602 / 326602) & 200G (10000603 / 326603)**

## HANDY MICRO TORCH PRODUCT MANUAL

PART NO. 211234



**CAUTION:** For maximum protection, always wear safety goggles, gloves or other appropriate equipment.

**IMPORTANT: READ THESE INSTRUCTIONS FOR USE CAREFULLY. FAMILIARISE YOURSELF WITH THE APPLIANCE BEFORE CONNECTING IT TO ITS GAS CONTAINER. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

### KEEP OUT OF REACH OF CHILDREN

This appliance shall only be used with Tradeflame Butane.

IT MAY BE HAZARDOUS TO ATTEMPT TO FIT OTHER TYPES OF GAS CONTAINERS. ONLY USE IN WELL-VENTILATED AREAS.

**CARBON MONOXIDE HAZARD - USING THIS APPLIANCE IN AN ENCLOSED SPACE MAY CAUSE DEATH. DO NOT USE IN CARAVANS, TENTS, MARINE CRAFT, CARS, MOBILE HOMES OR SIMILAR LOCATIONS.**

**CAUTION:** Accessible parts may be very hot. Keep young children away.

### SAFETY INFORMATION

- Inspect the appliance regularly for signs of wear, leaks or incorrect operation.
  - Do not modify this appliance.
  - Ensure all packaging is removed prior to use.
  - Check that seals are in place and in good condition.
  - Do not use this appliance if it has damaged or worn seals.
  - Do not use the appliance if it is leaking, damaged or does not operate properly.
  - Refill in a well-ventilated location, preferably outside, away from people and any source of ignition, such as naked flames, pilot flame, electric heaters/equipment.
  - To avoid injury or damage, only ignite the torch when clear of face, hands, clothing or combustible materials.
  - Always inspect your environment before igniting to ensure the area is clear of any potential ignition sources or hazards.
  - The burner becomes extremely hot during and after operation.
- Care must be taken to avoid accidental burns.
- This appliance must be operated away from any flammable material or surfaces and materials.
  - Never leave the torch unattended once lit. Extinguish the torch first ensuring it is completely out and safe before leaving unattended.
  - Protect from direct sunlight. Do not expose to temperature above 50°C/120°F.
  - Do not breathe gas, fumes, vapour or spray. If inhaled, move the person to a fresh air environment.
  - For maximum protection, always wear safety goggles, gloves or other appropriate equipment.
  - Avoid contact with eyes or skin. In case of contact with eyes, rinse immediately with plenty of water and seek medical advice.